

Stripy ~ Unique Digital Audio Speaker System User Manual



Designed by Danny Tsang.
Copyright © 2005 Music Studio™. Patents Pending. All rights reserved.

Printed in China

ENGLISH

Music Studio™ Stripy House - Unique Digital Audio Amplifier User Manual

 
Stripy ~ 180° multi-angled speakers system provides unique control, ingenious attributes and a space-saving design. Simply connect your Music Studio's World and enjoy!

Connecting your Stripy Amplifier to your PC or other music sources

Versatile connectivity to PCs, PSP, MP3 / CD Players, and other audio devices such as iPod, MD, Juice Box TV, CD Player, Audio compact disc player, Portable DVD Player, Digital Video Camera, Palm, Computer, Notebook, Radio.....etc.

Installation Instruction (please refer to picture 1)

1. Plug the speaker cables (7) into either speaker outlet jack left or right (1) on rear of the amplifier "Stripy house".
2. Plug the power cord into DC outlet (2) on rear of the amplifier "Stripy house".
3. Signal input cable(6) plug to Audio Out on PC, or other portable audio source.
4. Plug the power adapter into the wall power socket.

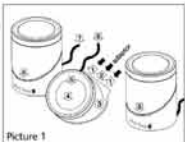

Operation Instruction

1. Press functional control knob (4) and stand for 3 seconds until indicator (5) & (8) are light-up.
2. Adjust Volume and Tone by using function knob (4), to monitor sound level.

Step	Function	Indicator Light	Function Activate
1	ON/OFF	Pink-white	Press & Hold button for 3 seconds (turn on when the first time or after drawn out the electric plug, volume start at middle level device)
2	VOLUME	Pink-white	Volume activates after power On (rotate button to right for louder and left for lower volume)
3	BASS	Diamond Blue	Press the button once after Volume activated (rotate button right or left to adjust Bass level at once), returns to Pink-white indicator after 6 seconds
4	TREBLE	Garden Green	Press the button once after Bass activated (rotates button right or left to adjust Treble level at once), returns to Pink-white indicator after 6 seconds
5	MUTE	Wild Fire (flashing)	Press quickly the button twice (for Mute deactivate, simply touch or turn around the button, returns to Pink-white indicator)
6	OFF	No indicator light	Press & Hold button for 3 seconds

IMPORTANT SAFETY INFORMATION



CAUTION ELECTRIC SHOCK HAZARD

Important Safety Information

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Install in accordance with the manufacturer's instructions.
- Unplug the power adapter from electrical outlet before cleaning them with a dry cloth.
- Place the speakers in a stable location so they will not fall causing damage to the speakers or bodily harm.
- Protect this product from dampness. Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them.
- Keep your amplifiers away from sources of liquids, such as bathtubs, showers, sinks.....etc. Liquid could cause electrical shock or an electrical fire.
- Keep your amplifiers away from sources of heat, such as radiators, heat registers, heaters, stoves and other similar appliances that produce heat.
- Protect this product from direct sunlight such as in a car cabinet, beside windows with strong sunshine.....etc.
- Headphone should not be inserted into this product.
- Do not block the openings in the speaker/power adapter cabinets, never push objects into speaker vents or slots because of fire or electric shock hazards, and provide sufficient space around the speakers/adapter for proper ventilation.
- Operate the speakers only from the low level audio line out jack of the computer or of an audio device.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Use ONLY attachments/accessories specified by the manufacturer. Music Studio cannot be responsible for damage caused by any other power adapter or other amplifier(s).
- For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the computer or other portable audio apparatus.
- Disconnect the power adapter if the power cord or plug becomes frayed or damaged, or if you suspect that your amplifiers need repair.
- Unplug this apparatus when unused for long periods of time.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Functional Remarks

 
1. Whenever Volume / Bass / Treble is adjusted up to clockwise maximum level or anti-clockwise minimum level that will be indicated by 4 times flashy light, and middle level will be indicated by 1 time flashy light.
2. Previous preset sound requirement will be stored for next power on again, except the electric plug is drawn out.
3. Functional key sequences (Indicator Lights' order):
Volume (Pink-White) → Bass (Diamond Blue) → Treble (Garden Green) and in regular repeated orders.
4. Sound level should be adjusted at once when Bass / Treble is selected, otherwise, it will auto turn back to volume situation after 6 seconds.
5. Both left & right speakers will light on by Pink-white indicators while they are linked Stripy House with power Adapter and successfully powered.
6. Stripy's audio direction would be multi-angled adjusted: from vertical straight up to angle 180°, through gentle twisting the upper half part of the speakers to right direction (for right speaker) and to left direction (for left speaker). (please refer to picture 2)
7. No any indicator light will be on after turn off.
8. 8 inches round storage space are being provided on the bottom of both left and right speakers for keeping an extra cables, simply press the cable to the cable's holder to fix it after suitable length stored (for cable's holder instruction, please refer to picture 3).

Product Features

- High efficiency Class-D Amplifier, stereo: 4.5 watts x 2
- Volume Control 40dB range, +/- 20dB
- Bass Control 20dB range, +/- 10dB
- Treble Control 20dB range, +/- 10dB
- Encoder Function Designation By LED (LED Alterable Color)
- Power Standby Ⓞ
- Stereo Analog Audio Input

Specifications

- Total output power: 9 watts RMS into 4 ohms at 10KHz / 10%THD (Total Harmonic Distortion)
- Or 4.5 watts RMS per channel into 4 ohms at 10KHz / 10% THD
- Maximum Power for the amplifier: 13 watts into 4 ohms
- Distortion: better than 0.5% at 1 watt RMS
- Signal to noise ratio: < 150mv
- Frequency response: F0 ~ 20 KHz
- Drivers: 1.3" 4 ohms high excursion driver
- Signal input: 100mV ~ 1V P-P volume adjustable
- DC input: 15V
- Speaker dimensions: Ø48mm x 62mm(H)

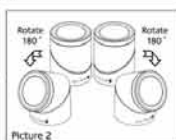

One year free warranty registration can be applied by :

1. Web : www.musicstudio.com.au or www.musicstudio.com.hk
2. E Mail : info@musicstudio.com.au or info@musicstudio.com.hk
3. Hotline: Australia Toll Free: 0011 800 800 800 28, New Zealand Toll Free: 00 800 800 800 28, UK Toll Free: 00 800 800 800 28, Singapore Toll Free: 001 800 800 800 28, Hong Kong: (852) 8204 4828

Important Notices

1. The original purchased Invoice MUST be kept for our verification when repair is requested.
2. This Limited Warranty does not cover any consumable items, accessories, cabinet / cosmetic damage or loss to any software programs or data, damage due to accident, misuse, abuse, negligence, improper voltage supply, unauthorized repair, modifications of this products.

Product Warranty

Limited Warranty. Music Studio warrants that any hardware product accompanying this documentation shall be free from significant defects in material and workmanship for a period of one (1) year from the date of purchase. Music Studio's limited warranty is nontransferable and is limited to the original purchaser.

Remedies. Music Studio's entire liability and your exclusive remedy for any breach of warranty shall be, at Music Studio's option, to: (a) repair or (b) replace the hardware, or (c) refund the price paid but limited to complete package and product without return. Provided that the hardware is returned to the point of purchase or such other place as a Music Studio may direct, with a original of the sales receipt and/or local warranty card. Any replacement hardware will be warranted for the remainder of the original warranty period. These remedies are void if failure of the hardware has resulted from accident, abuse, misapplication, or any unauthorized repair, modification or disassembly.

DISCLAIMER OF WARRANTY. THE WARRANTIES EXPRESSLY SET FORTH IN THIS AGREEMENT REPLACE ALL OTHER WARRANTIES. MUSIC STUDIO AND ITS SUPPLIERS EXPRESSLY DISCLAIM ALL OTHER WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD-PARTY RIGHTS WITH RESPECT TO THE HARDWARE. NO MUSIC STUDIO DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION, OR ADDITION TO THIS WARRANTY.

LIMITATION OF LIABILITY. IN NO EVENT WILL MUSIC STUDIO OR ITS SUPPLIERS BE LIABLE FOR ANY COSTS OF PROCUREMENT OF SUBSTITUTE PRODUCTS OR SERVICES, LOST PROFITS, LOSS OF INFORMATION OR DATA, OR ANY OTHER SPECIAL, INDIRECT, CONSEQUENTIAL, OR INCIDENTAL DAMAGES ARISING IN ANY WAY OUT OF THE SALE OF, USE OF, OR INABILITY TO USE ANY LATEC PRODUCT OR SERVICE, EVEN IF MUSIC STUDIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO CASE SHALL MUSIC STUDIO'S AND ITS SUPPLIERS' TOTAL LIABILITY EXCEEDS THE ACTUAL MONEY PAID FOR THE MUSIC STUDIO PRODUCT OR SERVICE GIVING RISE TO THE LIABILITY. The above limitations will not apply in case of personal injury or where and to the extent that applicable law requires such liability.

Troubleshooting

Here are solutions to problems that might arise while using your speakers. For problems with your computer or audio products, consult the user's manual that came with it.

Speakers produce weak or no sound

- Re-check all the connections. These Pinky White Light Indicators which are independently provided for left speaker, right speaker and master control amplifier (Stripy House) light on after power on successfully. (for installation instruction, please refer to Picture 1)
- Check volume control on computer, sound card, or your music sources.
- Check volume control of your amplifier (Stripy House), turn volume to right direction for louder.

One speaker doesn't produce sound

- Is the soundcard/sound source connection secure? Make sure the cable from the sound sources to the main control amplifier (Stripy House) is properly secured.
- Is the plugs on left or right speakers are tightly plugged on?

User Warnings

1. Caution / Danger may be caused because of small parts and package plastic bags contained. This product is NOT suitable for children aged below 12.
2. Electrical equipment may be hazardous if misused. Operation of this product must always be supervised by an adult. Do NOT allow anyone access to the interior of any electrical product, and do NOT permit children to handle any cables.

 
Customers Service

If you need help with your amplifier, please contact Music Studio at Services Hotlines:
Australia Toll Free: 0011 800 800 800 28, New Zealand Toll Free: 00 800 800 800 28,
UK Toll Free: 00 800 800 800 28, Singapore Toll Free: 001 800 800 800 28,
Hong Kong: (852) 8204 4828 or email at info@musicstudio.com.au
For prompt assistance, please have the following information handy:

- a. Your name and contact number
 - b. Date of the amplifier purchased
 - c. Product name and serial number (printed on the package box)
- On the internet see : <http://www.musicstudio.com.au>

Accessories

- This package consists of the items below :
1. Stripy left & right speakers with 1.5m cables
 2. Stripy House master control amplifier with 80cm cable
 3. Power Adapter
 4. User Manual
 5. Warranty Card

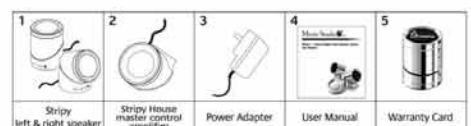

Warning :
The copyright proprietor has licensed (including its attributes, functions and features). All rights are reserved. Any unauthorized reproduction or copying or any part thereof is strictly prohibited.
Copyright © 2004 Music Studio™. Patents Pending. All rights reserved. Music Studio™ are registered trademarks of Beane Electronics Limited. All other brand names, trademarks, or registered trademarks are the property of their respective owners. Specifications subject to change without notice. For one year limited warranty, see warranty information.
Declaration :
Our company will not be responsible for any mistakes in this manual. Prior notices will not be given in case of any amendments within the manual or any upgraded or updated information about this product. The mentioned trademarks and names are owned by the respective companies.